

## Computerized Telephone Network Instructions

### *First:*

For DIRECT mode: Press # (the number sign) to place a direct call which will keep the phone lines from being busy. CAUTION--this will disconnect a Distant Caller presently online. Computer should answer "READY".

For HOLD mode: Press \* (the asterisk) to place a call which will put a Distant Caller on hold. Computer should answer "READY, HOLD" followed by "HOLD" every six seconds.

*Second*, dial the appropriate number:

1 .....	GRANDMA	5 .....		4 .....	FAMILY ROOM
2 .....	MOM	6 .....	GRANDPA		
3 .....	LEE	7 .....	DAD		

Computer should answer "CALLING" followed by the number dialed, and then it contacts the room dialed. In HOLD mode, the family room is automatically called in addition to the room dialed. It calls a room for 20 seconds, then stops and says "READY". Another room may then be dialed.

### NOTES ON DIRECT MODE:

DIRECT mode is useful because it doesn't tie up the outside phone line, and if a call comes in from a Distant Caller, three siren sounds are heard in the rooms in use, and the Distant Caller is automatically connected.

### NOTES ON HOLD MODE:

HOLD mode is useful because it won't disconnect a Distant Caller presently online, but if there isn't anyone online, the phone lines will be busy.

When HOLD mode is activated, the handset may be placed back in its cradle, and it will not release hold for 15 minutes, unless a phone is picked up.

The phone can be used as a simple hold button to change phones by pressing the \* to enter the HOLD mode, putting the handset in its cradle, and picking up another phone in the house. It will then release hold.

### Special "Silent" HOLD Mode:

*If the # is pressed while in HOLD mode, the computer should answer "READY, HOLD" and then when a room is dialed and a person picks up the phone, the Distant Caller remains on hold until both phones are hung up, and then one phone is taken off hook. This feature is used to keep the Distant Caller from hearing the conversation.*

### WHAT THE DIFFERENT RINGS MEAN:

1. One siren sound all by itself: Computer malfunction on my part.
2. Repeated waves of siren sounds: Phone is ringing.
3. Continuous siren sounds in all rooms: Emergency mode is being activated by a Distant Caller.
4. Two siren sounds followed by a number: Lee is being called.
5. One siren sound followed by a number: Anyone else is being called.
6. Two siren sounds followed by a number quickly repeating: Lee is being called by a Distant Caller.
7. Three siren sounds while DIRECT mode is in use: A distant call is being automatically connected. Be prepared to say "hello".